

Fraction Collector commands

F = Do one step (Q or D or Single)

S= Step to next slot in the cassette

C= Step to next cassette

D= Do down

U= Do up

T= Arm in

O= Arm out

R= Start/Stop fraction collector

P= Cooling on

N= Cooling off

Z= Reset

Computer interface:

RS-232, 3800 b/s, 8-N-1

USB-port FTDI-chip driver.